



♦ Water heat 3 models (€

Fan heater SWT

Ceiling mounted fan heater with water heat

Application

The SWT fan heater is used for heating entrances, stores, industrial premises, workshops, sports halls, garages and shops. The low height means that SWT can also be recessed into a suspended ceiling.

Comfort

Frico's fan heaters are extremely quiet and quickly provide comfortable heating.

Operation and economy

Frico's fan heaters have a long life, providing fast and effective heating at a low cost. SWT is very easy to install and very reliable. The hinge on the front panel allows for inspection and cleaning.

Design

The SWT fan heater has a robust design in white enamelled steel panels. SWT is intended for water connection and is ceiling mounted.

Product specifications

- Installed directly to the ceiling or suspended from brackets
- Intended for water temperatures up to +80 $^{\circ}\mathrm{C}$ and 10 bar.
- Two fan speeds.
- Front panel with hinge.
- Simple 230V~ installation.
- \bullet Maximum ambient temperature +30 °C.
- The water coil has copper pipes and aluminium flanges.
- Bearing carried fan motor with thermal protection.
- Outer casing in galvanised white enamelled steel panels.

Technical specifications | Fan heater SWT with water heat

Туре	Heat output*1	Air flow	Air flow Air flow Sou leve		∆ t* ^{1,3}	Air throw*4	Air throw*4 with extension collar		
	[kW]	[m³/h]	[m³/s]	[dB(A)]	[°C]	[m]	[m]		
SWT02	7,8/11	700/1100	0,19/0,31	37/53	33/29	2,2/4	4/7		
SWT12	14/18	1300/2000	0,36/0,56	44/57	25/22	2,7/4,5	5/8		
SWT22	29/40	2500/3900	0,69/1,08	48/60	34/30	4,5/7,5	7/12		

Туре	Water volume* ⁵ [I]	Voltage [V]	Amperage [A]	LxWxH [mm]	Weight [kg]
SWT02	1,2	230V~	0,4	705x535x330	19
SWT12	1,7	230V~	0,6	825x625x355	26
SWT22	3,9	230V~	1,0	1135x735x415	41

^{*1)} Applicable at water temperature 80/60 °C, air temperature, in +15 °C.

Protection class: IPX4. CE compliant.




^{*2)} Conditions: Distance to the unit 5 metres.

^{*3)} Δt = temperature rise of passing air at maximum heat output and lowest/highest airflow.

^{*4)} The air throw data above is valid when the horizontally adjustable air director is used and the outlet temperature is +40 °C and the room temperature is +18 °C. The air throw is defined as the distance in a straight angle from the fan heater to the the point where the air speed has dropped to 0,2 m/s.

^{*5)} Water volume inside battery.

Dimensions

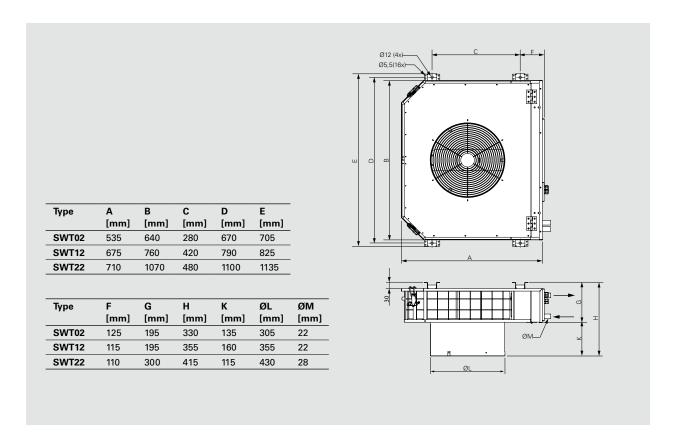

Mounting and connection

Mounting

Fan heater SWT is installed directly to the ceiling or suspended from brackets. The heater is screwed into place in the ceiling using brackets. For minimum dimensions with permanent installation, see diagram 1.

Connection of heating coil

The water inlet, with or without valve, is connected to the heater's lowest positioned pipe and the outlet to the highest positioned pipe. The connections to SWT02 and SWT12 are 22 mm, external thread and on SWT22 28 mm, external thread. The bleed valve must be connected to the high point outside of the unit or to the outlet pipe in the installation. Bleed and drain valves not included with the unit. Installations that are exposed to frost must be equipped with an external automatic frost protection to ensure that the water coil does not split when frozen.

Connection

SWT fan heaters are designed for permanent installation and are connected via knock-outs on the rear of the heater.

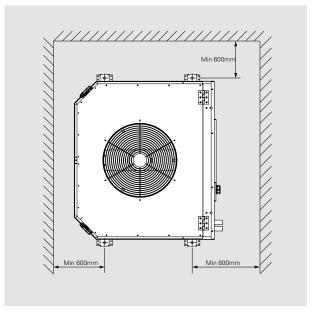


Fig. 1: Minimum distance for fixed installation.

Control options

Control by thermostat only

The thermostat starts/stops the fan and also controls the heat supply on/off. The fan is set to run on high speed. Complete regulation kit:

- KRT1900 or T10/TK10, room thermostat
- TVV20/25, valve + SD20, acutator

2-step control of airflow only

The air flow is manually regulated in 2 steps. No heat regulation, maximum water flow through the heating coil.

Complete regulation kit:

• CB20, control panel

Thermostat and 2-step control

The thermostat starts/stops the fan and also controls the heat supply on/off. The air flow is manually regulated in 2 steps

Complete regulation kit:

- CB20, control panel
- KRT1900 or T10/TK10, room thermostat
- TVV20/25, valve + SD20, actuator

5-step control of airflow only

The air flow is manually regulated in 5 steps. No heat regulation, maximum water flow through the heating coil.

Complete regulation kit:

 RE1,5, 5-step regulator max 1,5A, or RE3, 5-step regulator max 3A, or RE7, 5-step regulator max 7A

Thermostat and 5-step control

 
The thermostat starts/stops the fan and also controls the heat supply on/off. The air flow is manually regulated in 5 steps.

Complete regulation kit:

- RE1,5, 5-step regulator max 1,5A, or RE3, 5-step regulator max 3A, or RE7, 5-step regulator max 7A
- KRT1900 or T10/TK10, room thermostat
- TVV20/25, 2-way valve or TRV20/25 3-way valve + SD20, actuator

For further options, see section on thermostats and controls or contact Frico.

Controls



T10/TK10, thermostats

Processor controlled thermostats with concealed and visible dials. Setting range +5 - +30 °C. Connection voltage: 230 V. Max. breaking current: 10 A. IP30.

KRT1900, capillary tube thermostat

Capillary tube thermostat with concealed dial. Setting range 0 – +40 °C. Max. breaking current: 16/10 A (230/400 V). IP55.

CB20, control box


Controls the airflow in 2 steps. Delivered in encapsulated box for wall mounting. Can control several units. Max input 12 A. IP44.

RE1,5/RE3/RE7, 5-step change-over switch for air flow

Controls the air flow in 5 steps. **RE1,5** controls maximum 1,5 A. **RE3** controls maximum 3 A. **RE7** controls maximum 7 A. To control the heat, a suitable thermostat and a valve set or a single valve + actuator are needed. IP54.

Туре	Description	LxHxW [mm]
T10	Electronic thermostat	80x80x31
TK10	Electronic thermostat with visible knob	80x80x31
KRT1900	Capillary tube thermostat	165x57x60
CB20	Control box	155x87x43
RE1,5	5-step change-over switch for air flow 1,5 A	200×105×105
RE3	5-step change-over switch for air flow 3 A	200x105x105
RE7	5-step change-over switch for air flow 7 A	257x147x145

 Water regulation



TVV20/25, valves + SD20, actuator

TVV20/25, 2-way regulation valve and SD20, actuator on/off provides a basic form of water regulation, without the possibility of adjusting or shutting the water flow off, e.g. when making maintenance. A suitable thermostat is chosen to regulate TVV20/25 and SD20. DN20/25.

Туре	Description
TVV20	2-way valve DN20
TVV25	2-way valve DN25
SD20	Actuator on/off 230V

For further information and options regarding our water controls, see section on thermostats and controls or contact Frico.

Accessories

SWTCF, filter

With the filter installed the interval for cleaning the water coil is extended. The filter is delivered in two pieces.

SWTCL, air director

To avoid drafts at low ceiling heights the air director can be installed to direct air more to the side.

SWTCE, extension collar

At high installation the outlet collar for the SWT can be extended. This increases the throw pattern of the air. SWTCE02 increases the throw pattern to 4-7 m, SWTCE12 increases it to 5-8 m and SWTCE22 to 7-12 m.



Туре	Description
SWTCE02	Extension collar 350 mm to SWT02, increases the throw pattern to 4-7 m
SWTCE12	Extension collar 350 mm to SWT12, increases the throw pattern to 5-8 m
SWTCE22	Extension collar 350 mm to SWT22, increases the throw pattern to 7-12 m
SWTCF02	Filter for SWT02
SWTCF12	Filter for SWT12
SWTCF22	Filter for SWT22
SWTCL02	Air director for SWT02
SWTCL12	Air director for SWT12
SWTCL22	Air director for SWT22

Output charts water

Incoming / outgoing water temperature 80/60 °C

			Air temp. in = +10 °C				Air temp. in = +15 °C				Air temp. in = +20 °C			
Туре	Fan position	Airflow	Output	Air temp. out	Water flow	Pressure drop	Output	Air temp. out	Water flow	Pressure drop	Output	Air temp. out	Water flow	Pressure drop
		[m³/s]	[kW]	[°C]	[l/s]	[kPa]	[kW]	[°C]	[l/s]	[kPa]	[kW]	[°C]	[l/s]	[kPa]
SWT02	max	0,31	12,0	42	0,15	11,2	10,8	44	0,13	9,3	9,6	46	0,11	7,5
	min	0,19	8,7	46	0,10	6,2	7,8	48	0,09	5,1	6,9	50	0,09	4,1
SWT12	max	0,56	20,3	39	0,25	17,8	18,4	42	0,23	14,8	16,5	44	0,20	12,1
	min	0,36	15,4	44	0,19	10,7	13,9	46	0,17	9,0	12,5	49	0,15	7,4
SWT22	max	1,08	44,0	43	0,53	14,0	39,6	45	0,48	11,5	35,5	47	0,43	9,3
	min	0,69	32,0	47	0,39	7,8	28,9	49	0,35	6,5	25,7	51	0,31	5,2

Incoming / outgoing water temperature 60/40 °C


			Air tem	Air temp. in = $+10 ^{\circ}$ C Air temp. in = $+15 ^{\circ}$ C					Air temp. in = +20 °C					
Туре	Fan position	Airflow	Output	Air temp.	Water flow	Pressure drop	Output	Air temp. out	Water flow	Pressure drop	Output	Air temp. out	Water flow	Pressure drop
		[m³/s]	[kW]	[°C]	[l/s]	[kPa]	[kW]	[°C]	[l/s]	[kPa]	[kW]	[°C]	[l/s]	[kPa]
SWT02	max	0,31	7,5	30	0,09	4,9	6,4	40	0,08	3,8	5,3	34	0,06	2,7
	min	0,19	5,4	33	0,06	2,8	4,6	34	0,06	2,1	3,8	36	0,05	1,5
SWT12	max	0,56	13,0	29	0,16	8,3	11,1	31	0,13	6,3	9,2	34	0,11	4,4
	min	0,36	9,9	32	0,12	5,1	8,4	34	0,10	3,8	7,0	36	0,09	2,7
SWT22	max	1,08	27,1	30	0,33	5,9	23,2	33	0,28	4,5	19,3	35	0,23	3,2
	min	0,69	19,9	33	0,24	3,4	16,8	35	0,20	2,5	14	37	0,17	1,8

Incoming / outgoing water temperature 55/45 °C

			Air temp. in = +10 °C				Air temp. in = +15 °C				Air temp. in = +20 °C				
Туре	Fan position	Airflow	Output	Air temp. out	Water flow	Pressure drop	Output	Air temp. out	Water flow	Pressure drop	Output	Air temp. out	Water flow	Pressure drop	
		[m³/s]	[kW]	[°C]	[l/s]	[kPa]	[kW]	[°C]	[l/s]	[kPa]	[kW]	[°C]	[l/s]	[kPa]	
SWT02	max	0,31	8,1	34	0,2	20,5	6,9	34	0,17	15,4	5,8	36	0,14	11,1	
	min	0,19	5,8	34	0,14	11,2	5,0	36	0,12	8,4	4,2	38	0,1	6,1	
SWT12	max	0,56	13,6	26	0,33	31,9	11,7	32	0,28	24,3	9,9	34	0,23	16,8	
	min	0,36	10,3	30	0,25	19,2	8,8	35	0,21	14,7	7,5	36	0,18	10,1	
SWT22	max	1,08	32,1	33	0,71	25,6	25,3	34	0,62	19,1	21,2	37	0,51	13,7	
	min	0,69	21,5	35	0,52	14,1	18,4	37	0,45	10,6	15,4	39	0,37	7,6	

Pressure drop water

Water pressure drop over controls and valves

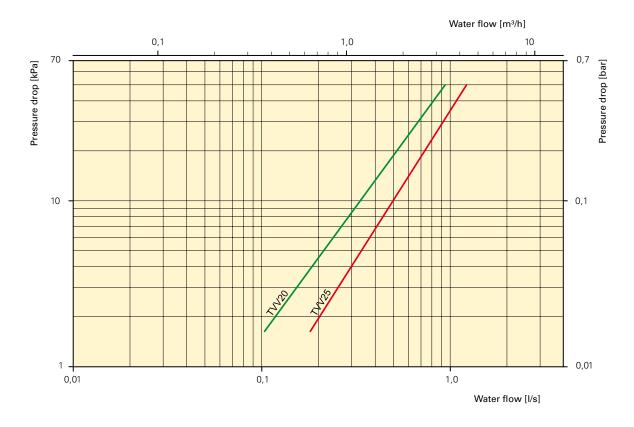


The pressure drop is calculated for an average temperature of 70 $^{\circ}$ C (PVV 80/60). For other water temperatures, the pressure drop is multiplied by the factor K.

Average temp water °C	40	50	60	70	80	90
K	1.10	1.06	1.03	1.00	0.97	0.93




Wiring diagrams

Internal wiring diagram

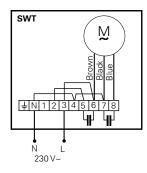


Control by thermostat only

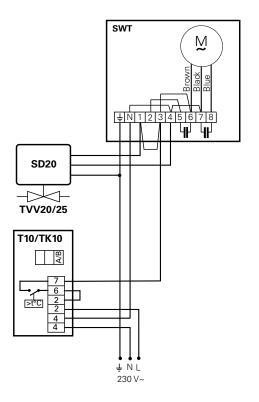





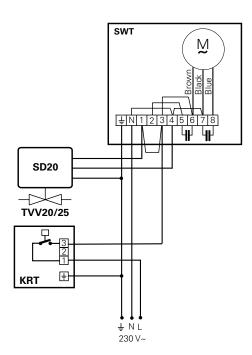



KRT1900, capillary tube thermostat




T10, electronic thermostat




TK10, electronic thermostat with knob

Wiring diagrams

2-step control of airflow only

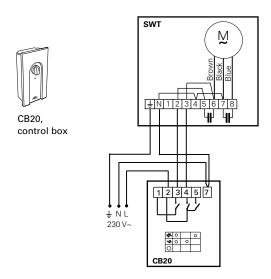


Thermostat and 2-step control

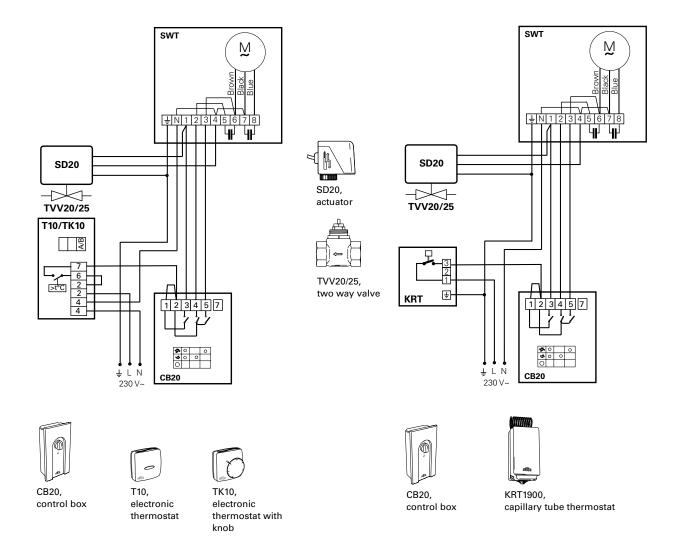

Wiring diagrams

5-step control of airflow only

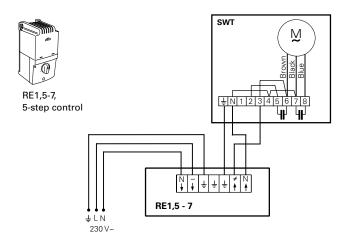

Thermostat and 5-step control

